

User Guide

HDT101
High Definition Tuner



IMPORTANT SAFETY INSTRUCTIONS

- 1 Read instructions**

All the safety and operating instructions should be read before the appliance is operated.
- 2 Retain instructions**

The safety and operating instructions should be retained for future reference.
- 3 Heed warnings**

All warnings on the appliance and in the operating instructions should be adhered to.
- 4 Follow instructions**

All operating and use instructions should be followed.
- 5 Cleaning**

Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6 Attachments**

Do not use attachments not recommended as they may cause hazard.
- 7 Water and moisture**

Do not use this equipment near water; for example, near a bathtub, wash bowl, kitchen sink, or laundry-tub, in a wet basement, or near a swimming pool, and the like.
- 8 Accessories**

Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall causing serious injury and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the equipment. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- 9 Ventilation**

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the equipment and to protect it from overheating. The openings should never be blocked by placing the product on a bed, sofa, rug, or similar surface. Equipment should never be placed near or over a radiator or heat register, or in a built-in installation such as a bookcase or rack unless proper ventilation is provided.
- 10 Power sources**

This product should be operated only from the type of power sources indicated on the marking label. If you are not sure of the type of power supplied to your home, consult your local power company. For equipment intended to operate from battery power, or other sources, refer to the operating instructions.
- 11 Ground or polarization**

This equipment may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.

This equipment may be equipped with a 3-wire grounding-type plug, a plug having a third (grounding) pin. This pin will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- 12 Power cord protection**

Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

IMPORTANT SAFETY INSTRUCTIONS

13 Outdoor Antenna Grounding

If an outside antenna or cable system is connected to the equipment, be sure the antenna or cable system is grounded as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

14 Lightning

For added protection for this equipment during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power line surges.

15 Power lines

An outside antenna system should not be located in the vicinity of overhead power lines or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits, as contact with them may be fatal.

16 Overloading

Do not overload wall outlets and extension cords as this can result in a risk of fire or electrical shock.

17 Object and liquid entry

Never push objects of any kind into this equipment through openings, as they may touch dangerous voltage points or short-out parts that could result in a fire or electrical shock. Never spill liquid of any kind on the product.

18 Servicing

Do not attempt to service this equipment yourself, as opening or removing covers may expose you to dangerous voltage or other hazards, refer all servicing to qualified service personnel.

19 Damage requiring service

Unplug this equipment from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a** When the power supply cord or plug is damaged.
- b** If the equipment has been exposed to rain or water.
- c** If liquid has been spilled, or objects have fallen into the equipment.
- d** If the equipment does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions, as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the equipment to its normal operation.
- e** If the equipment has been dropped or cabinet has been damaged.
- f** When the equipment exhibits a distinct change in performance, indicating a need for service.

20 Replacement parts

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

21 Safety check

Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the product is in proper operational condition.

IMPORTANT SAFETY INSTRUCTIONS

22 Battery usage

Notwithstanding any information provided by Motorola in this manual regarding the use of batteries, the end user assumes all responsibility and liability to use and dispose of batteries in accordance with all applicable laws, rules and regulations. Motorola will not be liable to anyone for the end user's failure to use and/or dispose of batteries in the proper manner and in accordance with such laws, rules and regulations, or for any defect contained in batteries which may cause injury damage to persons or property.

Regulatory Information

Federal Communications Commission Radio and Television Interface Statement for a Class 'B' Device

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in the residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Increase the separation between the equipment and the affected receiver
- Connect the equipment on a circuit different from the one the receiver is on
- Ensure that the cover plate for the security card is secured and tight

Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Declaration of Conformity

According to 47 CFR, Parts 2 and 15 for Class B Personal Computers and Peripherals; and/or CPU Boards and Power Supplies used with Class B Personal Computers, Motorola, Inc., 6450 Sequence Drive, San Diego, CA 92121, 1-800-225-9446, declares under sole responsibility that the product identifies with 47 CFR Part 2 and 15 of the FCC Rules as a Class B digital device. Each product marketed is identical to the representative unit tested and found to be compliant with the standards. Records maintained continue to reflect the equipment being produced can be expected to be within the variation accepted, due to quantity production and testing on a statistical basis as required by 47 CFR 2.909. Operation is subject to the following condition: This device must accept any interference received, including interference that may cause undesired operation. The above named party is responsible for ensuring that the equipment complies with the standards of 47 CFR, Paragraphs 15.101 to 15.109. The Class B digital apparatus meets all requirements of the Canadian Interface Causing Equipment Regulations.

Canadian Compliance

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Contact Us

For technical support of your Receiver, call Motorola Support at **1-866-668-2271** or **1-866-MOT-BCS1**.

For Motorola consumer cable products, education, and support:

<http://www.motorola.com/broadband/consumers>

Copyright © 2004 Motorola, Inc.

All rights reserved. No part of this publication may be reproduced in any form or by any means or used to make any derivative work (such as translation, transformation or adaptation) without written permission from Motorola, Inc.

Motorola reserves the right to revise this publication and to make changes in content from time to time without obligation on the part of Motorola to provide notification of such revision or change. Motorola provides this guide without warranty of any kind, either implied or expressed, including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Motorola may make improvements or changes in the product(s) described in this manual at any time.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. Dolby Digital is a registered trademark of Dolby Laboratories Licensing Corporation. All other product or service names are the property of their respective owners.

CONTENTS

OVERVIEW	3
HDT101 Components	4
What You'll Need to Get Started	4
FRONT PANEL.....	5
REMOTE CONTROL	6
INSTALLING THE HDT101	8
Connecting Video	9
Connecting Component Video (YPbPr)	10
Connecting S-Video or Composite Video	11
Connecting Audio	12
Connecting the Antenna and Power Cord	13
FINDING DIGITAL TV STATIONS IN YOUR AREA.....	14
PROGRAMMING YOUR HDT101	15
OPERATION	18
Using the i-Banner to View Program Information	18
Using Closed Captions	20
Advanced Closed Captions	20
ON-SCREEN MENU	21
Selecting Favorite Channels.....	22
Setting Parental Controls.....	23
Changing Your Password	25
Setting the HDT101's Clock for Your Time Zone	26
Adding a Channel	27
Customizing the On-Screen Menu and i-Banner.....	29
CONNECTING OTHER DEVICES TO THE HDT101.....	30
Connecting your VCR and Standard TV.....	31
Connecting your A/V Receiver, VCR and High Definition TV	33
Connecting your A/V Receiver, VCR and Stereo TV	35



REMOTE CONTROL IR INFORMATION	36
HDT101 ON-SCREEN MENU STRUCTURE	37
TROUBLESHOOTING.....	38

OVERVIEW

The Motorola HDT101 gives you access to free “over-the-air” digital television signals for your HDTV-ready home entertainment system or HDTV-capable monitor. If you are located in one of the local markets served by over-the-air digital broadcasts, you can start receiving high definition signals with your HDT101 and an antenna*.

The HDT101 offers:

- Conversion of all formats of digital TV signals to match your TV
- Support for all 18 ATSC (Advanced Television Systems Committee) digital broadcast formats
- Storage capacity of up to 1,500 digital channels
- Three different video connections: Component (YPbPr), S-Video, and Composite
- Full movie quality sound through Dolby Digital™ decode or pass-through for connection to your home theater system
- An easy to use on-screen menu that allows you to see program information and TV schedules, switch between favorite channels, and a host of other convenient functions
- Parental control features
- Closed captioning

**A separate antenna with a coaxial cable (not included) is required to receive over-the-air digital TV signals.*



HDT101 Components

The following items are packed with your HDT101:


- Remote control with batteries
- Audio (Left/Right) cables
- Component (YPbPr) cables
- *HDT101 User Guide*
- *HDT101 Quick Setup Guide*

What You'll Need to Get Started

To set up your HDT101, you'll need:

- A TV antenna, either outdoor or indoor
- A coaxial cable to attach the antenna to your HDT101


FRONT PANEL

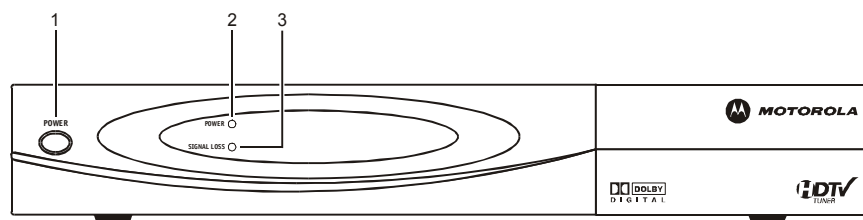

	Item	Description
1	POWER button	Turns the HDT101 off or on.
2	POWER LED	Lights to indicate the HDT101 is turned on.
3	SIGNAL LOSS LED	Lights to indicate the signal has been lost for the channel you are currently viewing. See "Troubleshooting" in the back of this User Guide for assistance.



REMOTE CONTROL

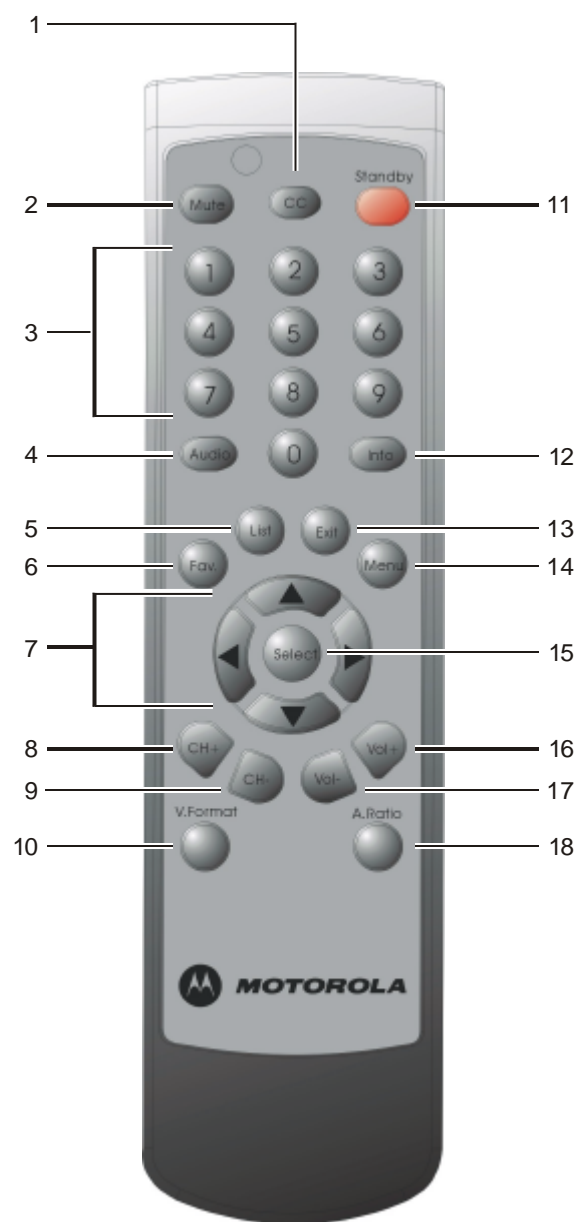

	Button	Description
1	CC	Displays the closed captioning settings.
2	MUTE	Mutes the volume.
3	Number keys	Use the number keys to enter a channel number or password.
4	AUDIO	Displays the audio languages available for the current program.
5	LIST	Displays all available channels.
6	FAV	Displays the Favorite Channel list.
7	Arrow keys	Navigate the on-screen menu.
8	CH +	Changes the channels up.
9	CH -	Changes the channels down.
10	V. FORMAT	For use with component video (YPbPr). Toggles between the video formats: <ul style="list-style-type: none">• 480i• 480p• 720p• 1080i
11	STANDBY	Puts the HDT101 in standby mode. To turn the HDT101 on, simply press STANDBY again.
12	INFO	Displays the i-Banner, which provides detailed information about the channel you are currently viewing.
13	EXIT	Exits the current on-screen menu.
14	MENU	Displays the on-screen menu.
15	SELECT	Selects an item on the on-screen menu.
16	VOL +	Increases the volume.
17	VOL -	Decreases the volume.
18	A. RATIO	Adjusts the aspect ratio between 16:9 (for wide screen TVs) and 4:3 (for normal TVs) and changes zoom and letterbox modes.



INSTALLING THE HDT101

Connecting your HDT101 is quick and easy. Just complete three steps:

- Connect the video
- Connect the audio
- Connect the antenna and power cord

Before you hook up your HDT101, please review the following:

- Disconnect power from the HDT101 before connecting or changing cable connections
- **Do not** place anything on top of the HDT101, especially other home entertainment components

If you wish to connect your HDT101 to your VCR or home theater receiver, see the additional connection diagrams at the back of this manual.

Connecting Video

Before connecting your TV to the HDT101, you must determine which type of video connection is accepted by your TV. The HDT101 offers three different video options:


- Component video (YPbPr)
- S-Video
- Composite video

High definition video can only be viewed with component video connections.

To determine whether your TV features component video, S-Video or composite video, check the manual supplied with your TV to determine the best connection available.

Connecting Component Video (YPbPr)

Component video provides the highest level of picture quality. If your television has component video inputs (Y, Pb and Pr connectors), connect to the component video connections on your HDT101 instead of the Video or S-Video connections.

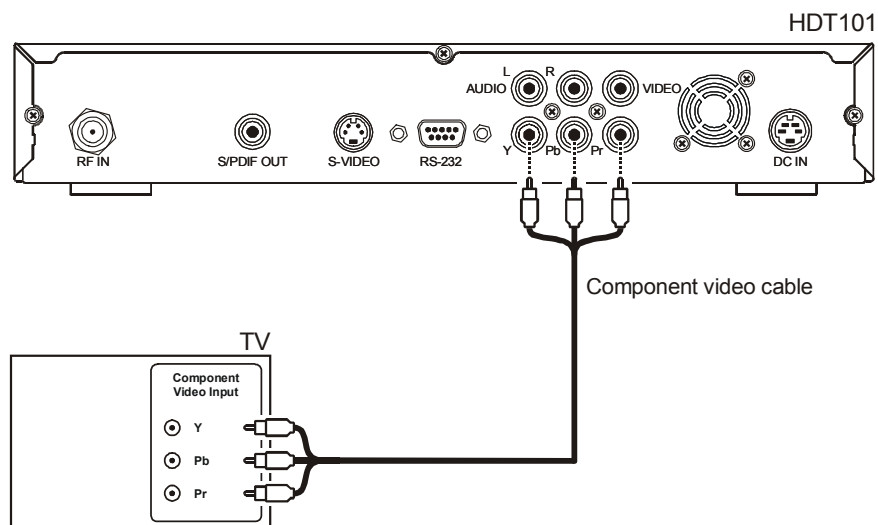

To connect component video:


Connect the component video cable supplied with the HDT101 to the **Y**, **Pb**, and **Pr** connectors on your TV and HDT101. The cables are color-coded to assist you in making the correct connections.

If component video connections are not available on your TV, use the S-Video connections.

Once you complete your video connections, proceed to the instructions for the audio connections.

Connecting S-Video or Composite Video

High definition video can only be viewed with component video connections. S-Video and composite video do not offer high definition video.

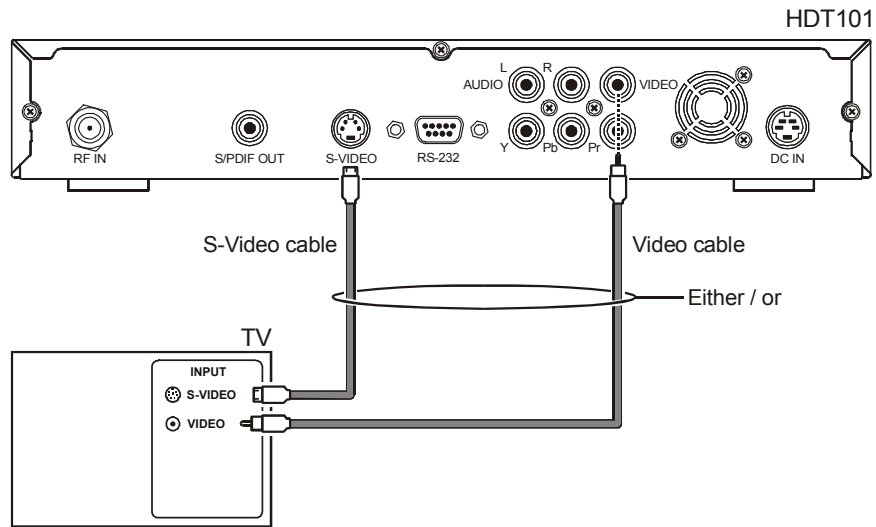

To connect S-Video:

Connect an S-Video cable (not supplied) to the **S-VIDEO** connector on your HDT101 and the **INPUT S-VIDEO** connector your TV.


If your TV does not offer S-Video, use the composite (VIDEO) connections.

To connect for composite video:

Connect a video cable (not supplied) to the **VIDEO** connector on your HDT101 and the **INPUT VIDEO** connector on your TV.

Now proceed to the next step--hooking up your audio connections.

Connecting Audio

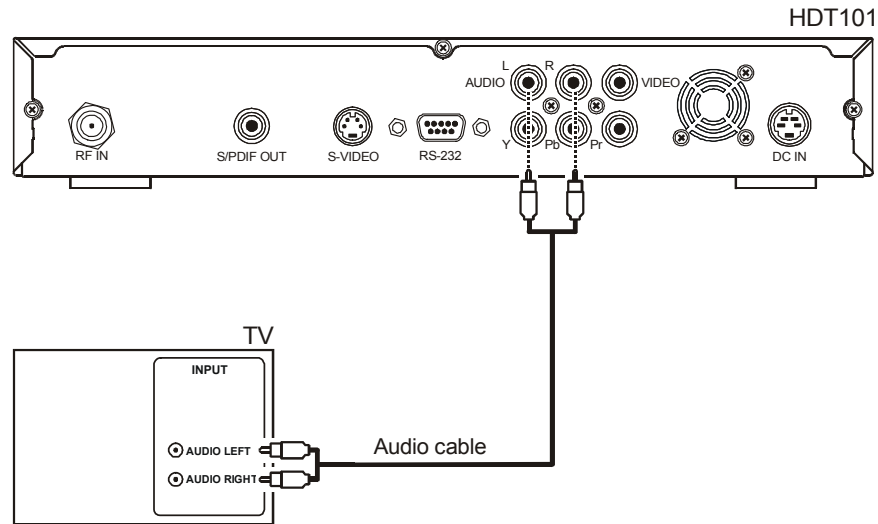


To hook up your audio connections:

Connect the stereo audio cable supplied with your HDT101 to the **L** and **R** connectors on the HDT101 and the **INPUT AUDIO LEFT** and **RIGHT** connectors on your TV.

Now proceed to the next step—connecting your antenna and power cord.

Connecting the Antenna and Power Cord

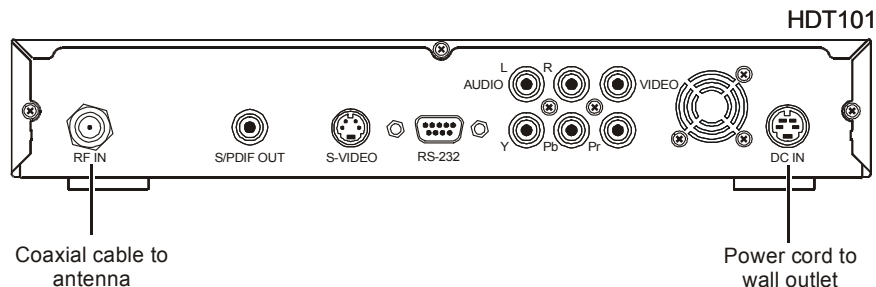

You can use an outdoor or indoor antenna to receive over-the-air high definition TV signals:

- 1** Connect your antenna's coaxial cable to the **RF IN** connector on your HDT101.
- 2** Plug the power cord supplied with your HDT101 into the HDT101's power connector and then plug the cord into a wall outlet.

Now that you've completed hooking up your HDT101, proceed to "Finding Digital TV Stations in Your Area" on the following page.



FINDING DIGITAL TV STATIONS IN YOUR AREA

After hooking up your HDT101, you need to find the digital TV stations available in your area:

- 1** Log on to the following website:
<http://www.antennaweb.org/>
- 2** Select **Choose An Antenna**.
- 3** Enter your address and find the DTV stations airing the EDTV/HDTV signal you can receive.

You can also use the AntennaWeb website to get information on choosing the correct antenna type and instructions for positioning the antenna for the DTV station you want to watch.

NAB (National Association of Broadcasters) has updates on the local DTV stations in operation at:

<http://www.nab.org/Newsroom/Issues/digitaltv/DTVstations.asp>

Now you're ready to program your HDT101 with over-the-air digital TV stations. Proceed to "Programming Your HDT101" on the following page for instructions.

PROGRAMMING YOUR HDT101


Before you can start using the HDT101, you need to program it with the station numbers of the over-the-air digital TV stations available in your area. This can be done by simply running *auto scan* from the HDT101's on-screen menu.

You can navigate the on-screen menu using the HDT101's remote control:

- Press the ▲ and ▼ arrow keys to move up and down the on-screen menu
- Press the **SELECT** button to select the highlighted item on the on-screen menu
- Press the **EXIT** button to return to the main menu from a submenu or to leave the main menu

To program your HDT101:


- 1** Press **POWER** on the HDT101's remote control to turn on the receiver.
- 2** Press **MENU**. The Menu screen is displayed:

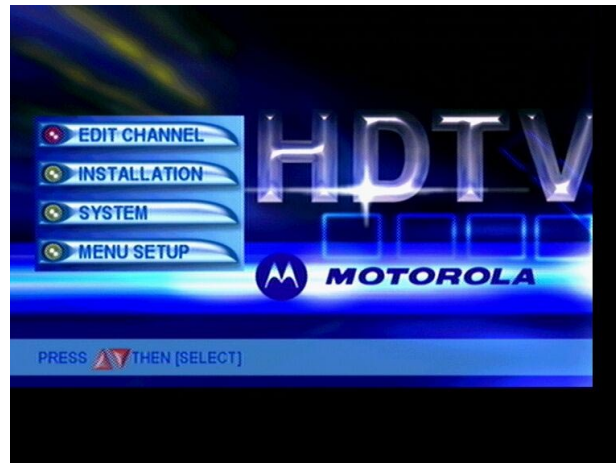

- 3** Using the ▼ arrow key, highlight **Installation** and press **SELECT**. The Password window is displayed.




- 4** Enter your four-digit password. If you have not yet created your own password, enter the default password: **0000**. The Installation menu is displayed:

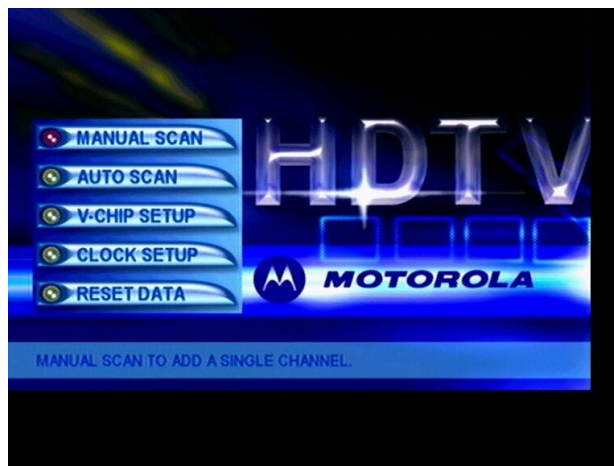

If you wish to change your password, see “Changing Your Password” on page 25.

- 5** Highlight **Auto Scan** and press **SELECT**.

The HDT101 starts scanning from Channels 2 to 69. The entire scan will take about four minutes. An indicator is displayed showing the scan's progress:

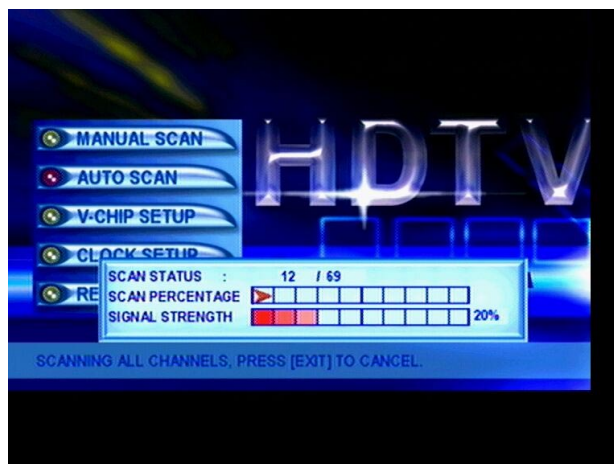

As each digital TV signal is scanned, you'll see the signal's channel number and program name displayed on the Program List:



The auto scan will end on channel 69.

- 6** Press **EXIT** to return to the main menu.
- 7** Press **EXIT** again to exit the main menu and start enjoying digital TV programs!

*If the picture displayed on your TV is too small, press the **A. RATIO** button on your remote control to change the picture size.*



OPERATION

Once your HDT101 is hooked up to your antenna and TV and you've added your TV channels, you can enjoy digital over-the-air TV programs. Simply use the remote control supplied with your HDT101 to change channels, view program information, and navigate the on-screen menus.

If you encounter any problems while operating your HDT101, please refer to the Troubleshooting section in the back of this manual.

Using the i-Banner to View Program Information

If you want to learn more about the channel you are watching, press **INFO** on your remote control and the HDT101 *i* (Information)-Banner will be displayed:



*The i-Banner will not display if you are viewing the HDT101's on-screen menu. Exit the on-screen menu and then press **INFO** on your remote control to view the i-Banner.*

The i-Banner provides the following information about the channel you are viewing:

- Current Channel Number
- Network Name
- Program Name (if provided by the local TV network)
- Current Local Time (as provided by the local TV network)
- Date
- Signal Level and Quality

To view extended program information about the channel you are currently viewing, press **INFO** again (with the i-Banner still displayed on your screen). A program listing is displayed for the current channel.

To exit any of the windows, press **EXIT** on your remote control.

The i-Banner will disappear from your screen after a set period of time. To change your i-Banner settings, see "Configuring your i-Banner Settings" in the On-Screen Menu section.

If the time display in the i-Banner is incorrect, please contact your local TV network.



Using Closed Captions

To turn on closed captions:

- 1** Press **CC** on your remote control to display the Closed Captions Settings.
- 2** Using the **▲** and **▼** keys, highlight **CC1** to select primary closed captions (in English) or highlight **CC2** to select secondary closed captions (in an alternate language).
- 3** Press **SELECT**.

Advanced Closed Captions

Some programs offer *advanced closed captions*. These programs will list different languages under Closed Captions Settings. Simply use the **▲** and **▼** keys to highlight the desired language and then press **SELECT**.

If a language is listed in the Closed Captions Settings with **–E** after it, this closed caption service will offer more expanded descriptions than regular closed captions.

If a language is listed with **–W** after it, the closed caption service has been designed specifically for wide-screen TVs (16:9).

To turn off closed captions, simply press **CC** on your remote control to return to the Closed Captions Settings.

Some programs may not transmit closed captions.

ON-SCREEN MENU

You can use the HDT101's on-screen menu to:

- Select favorite channels
- Set up parental controls
- Set the HDT101's clock
- Add a channel
- Customize the on-screen menu and i-Banner

Instructions for completing the tasks listed above, as well other on-screen menu functions, are included in this section.

You can navigate the on-screen menu using the HDT101's remote control:

- Press the ▲ and ▼ arrow keys to move up and down the on-screen menu
- Press the **SELECT** button to select the highlighted item on the on-screen menu
- Press the **EXIT** button to return to the main menu from a submenu or to exit the main menu



Selecting Favorite Channels

If there are certain channels you wish to access quickly, you can set them as *favorites* in the HDT101 on-screen menu. Favorite channels can be quickly accessed from the Favorite Channel List by pressing **FAV** on the remote control.

To set your favorites:

- 1 Press **MENU** on the remote control. The Menu screen is displayed.
- 2 Highlight **Edit Channel** and press **SELECT**. The Password window is displayed.
- 3 Enter your four-digit password. If you have not yet created your own password, enter the default password: **0000**. The Edit Channel window is displayed:



If you wish to change your password, see “Changing Your Password” on page 25.

- 4 Press the **▲** and **▼** keys to select the channel you wish to set as a favorite.
- 5 Press the **►** key to highlight the FAV column for that channel and press **SELECT**. The “favorite” icon appears in the column.
- 6 Press **EXIT** twice to exit the on-screen menu.

Setting Parental Controls

The HDT101 offers two options for parental controls:

- V-Chip
- Channel Lock

You can use the V-chip technology to block certain types of programming from being viewed. The V-chip settings are based on the MPAA (Motion Picture Advisory Association) and TV ratings systems. Once you set the rating limit in the V-Chip Setup menu, programming beyond that rating limit cannot be viewed.

To set up your V-chip settings:

- 1** Press **MENU** on the remote control. The Menu screen is displayed.
- 2** Highlight **Installation** and press **SELECT**. The Password window is displayed.
- 3** Enter your four-digit password. If you have not yet created your own password, enter the default password: **0000**. The Installation menu is displayed.
If you wish to change your password, see "Changing Your Password" on page 25.
- 4** Highlight **V-Chip Setup** and press **SELECT**. The V-Chip Setup window is displayed.
- 5** Press the **▲▼◀▶** keys to highlight the desired rating limit(s) and then press **SELECT**.
- 6** When finished, press **EXIT** twice to exit the on-screen menu.



You can lock a specific channel or channels so they cannot be viewed without entering a password.

To lock a channel:

- 1** Press **MENU** on the remote control. The Menu screen is displayed.
- 2** Highlight **Edit Channel** and press **SELECT**. The Password window is displayed.
- 3** Enter your four-digit password. If you have not yet created your own password, enter the default password: **0000**. The Edit Channel window is displayed:



If you wish to change your password, see “Changing Your Password” on page 25.

- 4** Press the ▲ and ▼ keys to select the channel you wish to lock.
- 5** Press the ► key to highlight the Lock column for that channel and press **SELECT**. The lock icon appears in the column.
- 6** Press **EXIT** twice to exit the on-screen menu.

Changing Your Password

The default password that is already configured in the HDT101 is 0000.

To change the password:

- 1** Press **MENU** on the remote control. The Menu screen is displayed.
- 2** Highlight **System** and press **SELECT**. The System menu is displayed.
- 3** Highlight **Password** and press **SELECT**.
- 4** Enter the current password or default password.
- 5** Using the number keys on the remote control, type in your new four-digit password.
- 6** Re-enter your password to confirm it.
- 7** Press **EXIT** twice to exit the on-screen menu.




Setting the HDT101's Clock for Your Time Zone

To change the time zone for the HDT101's clock:

- 1** Press **MENU** on the remote control. The Menu screen is displayed.
- 2** Highlight **Installation** and press **SELECT**. The Password window is displayed.
- 3** Enter your four-digit password. If you have not yet created your own password, enter the default password: **0000**. The Installation menu is displayed.

If you wish to change your password, see "Changing Your Password" on page 25.

- 4** Highlight **Clock Setup** and press **SELECT**. The Local Time window is displayed:

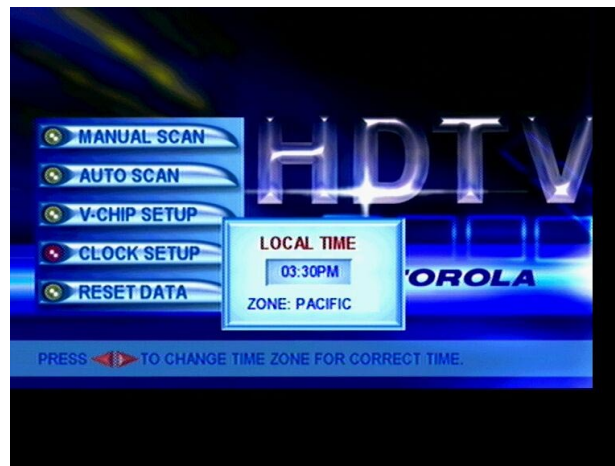

- 5** Press the ◀ and ▶ keys to change the time zone. When you are finished, Press **EXIT** twice to exit the on-screen menu.


Adding a Channel

If you wish to add a specific channel to your program list or you have made minor adjustments to your antenna, follow these steps for adding a single channel:

- 1** Press **MENU** on the remote control. The Menu screen is displayed.
- 2** Highlight **Installation** and press **SELECT**. The Password window is displayed.
- 3** Enter your four-digit password. If you have not yet created your own password, enter the default password: **0000**. The Installation menu is displayed.

If you wish to change your password, see "Changing Your Password" on page 25.

- 4** Highlight **Manual Scan** and press **SELECT**. The Manual Scan window is displayed:

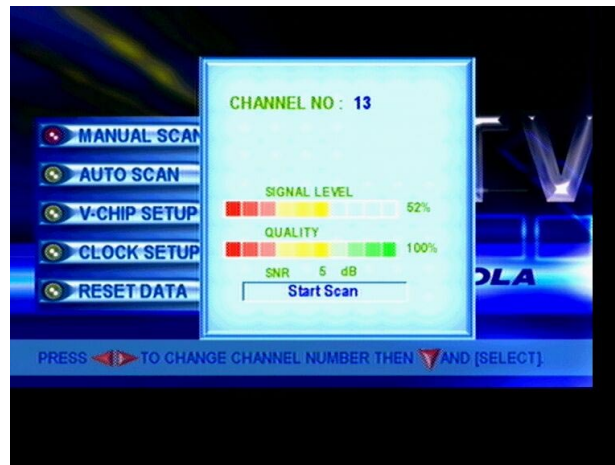

- 5** Press the number keys on the remote control to enter the channel number. Press the **▼** key and then press **SELECT** to start the scan.
If the channel is successfully added, the "Get Channel Success" message is displayed.



6 Press **EXIT** twice to exit the on-screen menu.

If the HDT101 cannot lock on the channel's signal, a "Time out error" message is displayed. Adjust the antenna's position and try adding the channel again.

Customizing the On-Screen Menu and i-Banner

To change the transparency of the on-screen menu so you can still view TV programs while displaying the menu:

- 1** Press **MENU** on the remote control. The Menu screen is displayed.
- 2** Highlight **Menu Setup** and press **SELECT**. The Menu Setup menu is displayed.
- 3** Highlight **Transparency** and press **SELECT**. The transparency indicator bar is displayed.
- 4** Press the ◀ and ▶ keys to change the transparency of the on-screen menu.
- 5** When finished, press **EXIT** twice to exit the on-screen menu.


To configure how your i-Banner is displayed:

- 1** Press **MENU** on the remote control. The Menu screen is displayed.
- 2** Highlight **Menu Setup** and press **SELECT**. The Menu Setup menu is displayed.
- 3** Highlight **i-Banner Setup** and press **SELECT**. The i-Banner Setup window is displayed.
- 4** Press the ▲ and ▼ keys to select an item. Press the ◀ and ▶ keys to change a setting:

Fading Mode	Fade Out or No Fade
Display Time	1 – 10 seconds
Time Format	AM/PM or 24 hr

- 5** When finished, press **EXIT** twice to exit the on-screen menu.

CONNECTING OTHER DEVICES TO THE HDT101

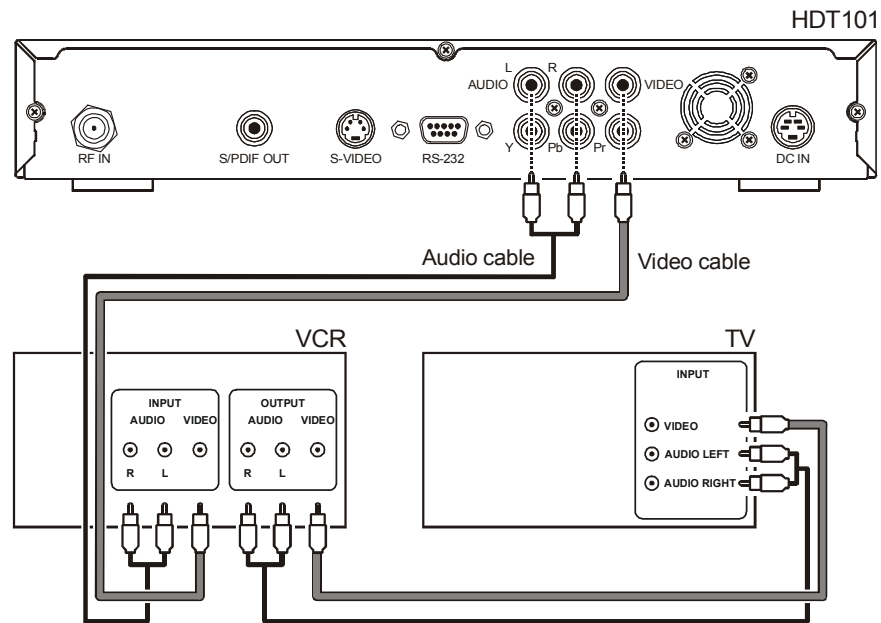


Connecting your VCR and Standard TV

- 1** Connect the stereo audio cable supplied with the HDT101 to the **L** and **R** connectors on the HDT101 and the **INPUT AUDIO R** and **L** connectors on the VCR.
- 2** Connect a video cable to the **VIDEO** connector on the HDT101 and the **INPUT VIDEO** connector on the VCR.

If your equipment supports it, S-Video connections may be used in place of the standard composite video connections. In most cases, S-Video offers a higher level of standard definition video quality than composite video.

- 3** Connect a stereo audio cable to the **OUTPUT AUDIO R** and **L** connectors on the VCR and the **INPUT AUDIO RIGHT** and **LEFT** connectors on the TV.
- 4** Connect a video cable to the **OUTPUT VIDEO** connector on the VCR and the **INPUT VIDEO** connector on the stereo TV.

CONNECTING OTHER DEVICES TO THE HDT101

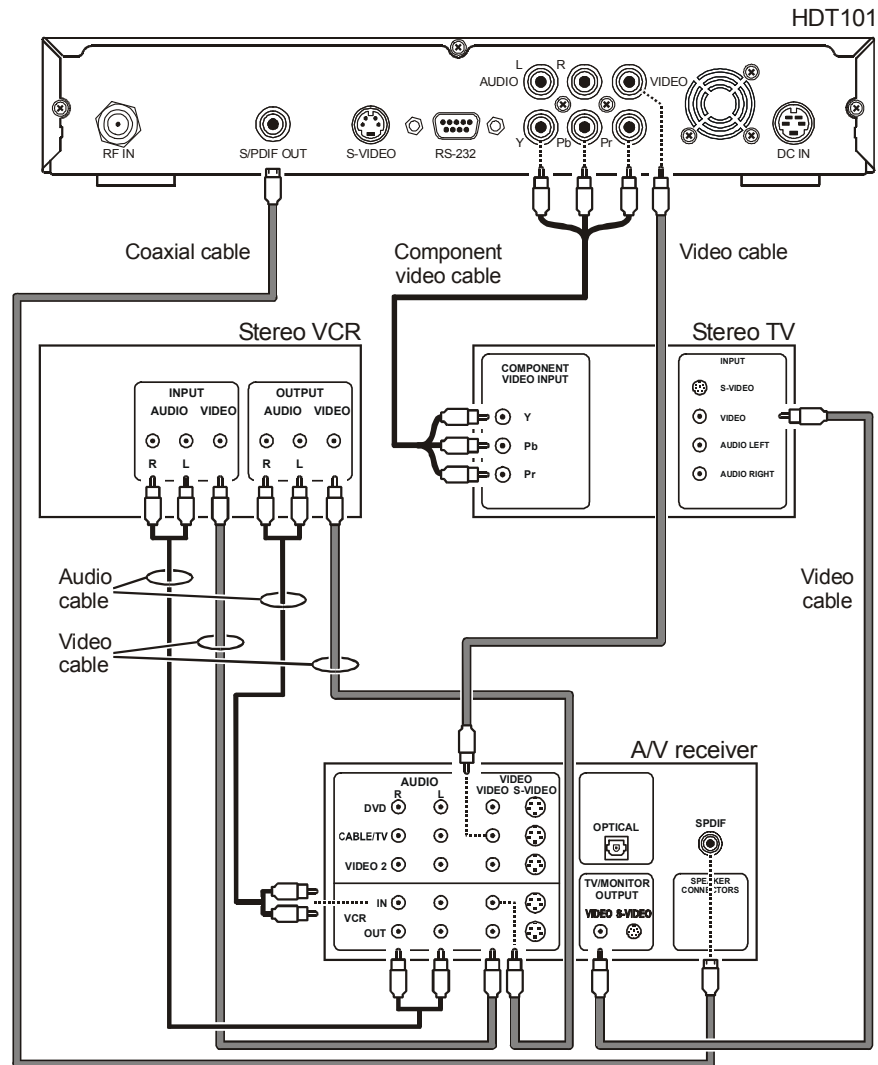

Connecting your A/V Receiver, VCR and High Definition TV

- 1** Connect the component video cable supplied with the HDT101 to the **Y**, **Pb**, and **Pr** connectors on your TV and HDT101.
- 2** Connect a coaxial audio cable to the **S/PDIF OUT** connector on the HDT101 and the **SPDIF** input connector on the A/V receiver.
- 3** Connect a video cable to the **VIDEO** connector on the HDT101 and the **CABLE/TV VIDEO** connector on the A/V receiver.

If your equipment supports it, S-Video connections may be used in place of the standard composite video connections. In most cases, S-Video offers a higher level of standard definition video quality than composite video.

- 4** Connect a stereo audio cable to the **VCR AUDIO OUT R** and **L** connectors on the A/V receiver and the **INPUT AUDIO R** and **L** connectors on the stereo VCR.

When using the digital audio output (S/PDIF OUT), the left / right baseband audio connections to the A/V receiver are not needed.

- 5** Connect a stereo audio cable to the **OUTPUT AUDIO OUT R** and **L** connectors on the stereo VCR and the **VCR AUDIO IN R** and **L** connectors on the A/V receiver.

- 6** Connect a video cable to the **INPUT VIDEO** connector on the stereo VCR and the **VIDEO VCR OUT** connector on the A/V receiver.


- 7** Connect a video cable to the **OUTPUT VIDEO** connector on the stereo VCR and the **VIDEO VCR IN** connector on the A/V receiver.

- 8** Connect a video cable to the **INPUT VIDEO** connector on the stereo TV and the **TV/MONITOR OUTPUT VIDEO** connector on the A/V receiver.

To switch between viewing input from your VCR and input from your HDT101, change your TV's video inputs from the Component input to the Video input.



CONNECTING OTHER DEVICES TO THE HDT101

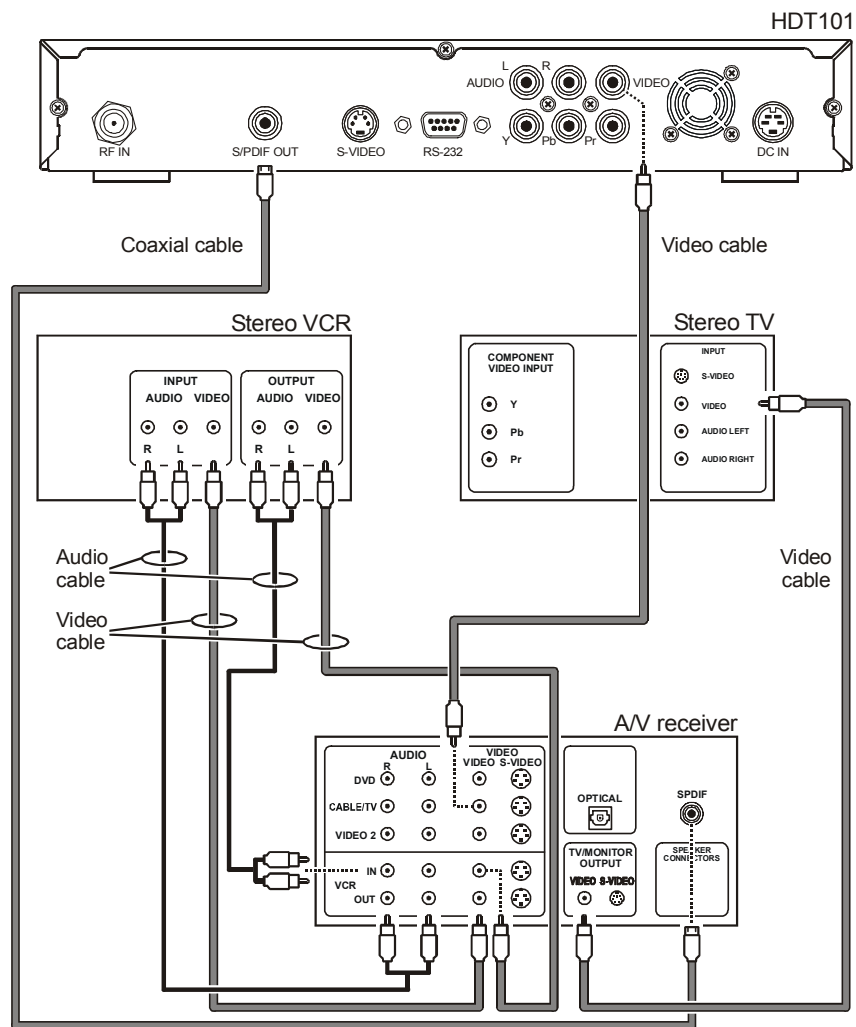

Connecting your A/V Receiver, VCR and Stereo TV

- 1 Connect a coaxial cable to the **S/PDIF OUT** connector on the HDT101 and the **SPDIF** input connector on the A/V receiver.

When using the Digital Audio output (S/PDIF OUT), the left / right baseband audio connections to the A/V receiver are not needed.

- 2 Connect a video cable to the **VIDEO** connector on the HDT101 and the **CABLE/TV VIDEO** connector on the A/V receiver.

If your equipment supports it, S-Video connections may be used in place of the standard composite video connections. In most cases, S-Video offers a higher level of standard definition video quality than composite video.

- 3 Connect a stereo audio cable to the **VCR AUDIO OUT R** and **L** connectors on the A/V receiver and the **INPUT AUDIO R** and **L** connectors on the stereo VCR.

- 4 Connect a stereo audio cable to the **OUTPUT AUDIO OUT R** and **L** connectors on the stereo VCR and the **VCR AUDIO IN R** and **L** connectors on the A/V receiver.

- 5 Connect a video cable to the **INPUT VIDEO** connector on the stereo VCR and the **VIDEO VCR OUT** connector on the A/V receiver.

- 6 Connect a video cable to the **OUTPUT VIDEO** connector on the stereo VCR and the **VIDEO VCR IN** connector on the A/V receiver.

- 7 Connect a video cable to the **INPUT VIDEO** connector on the stereo TV and the **TV/MONITOR OUTPUT VIDEO** connector on the A/V receiver.

To switch between viewing input from your VCR and input from your HDT101, change your A/V receiver's video inputs.


**REMOTE CONTROL IR INFORMATION**

The HDT101 uses the RC5 IR protocol with the following codes:

HEX	Remote Control Key	HEX	Remote Control Key
14	Power On	21	Vol-
01	1	11	CH+
02	2	10	CH-
03	3	1C	▲
04	4	1D	▼
05	5	2B	►
06	6	2C	◄
07	7	25	A. Ratio
08	8	12	V. Format
09	9	0F	List
00	0	0E	Exit
26	Audio	3C	Power Off
0C	Power Standby (Toggle)	2E	Select
38	Mute	29	Menu
0A	Info	1A	CC
20	Vol+	22	Fav.

HDT101 ON-SCREEN MENU STRUCTURE

To assist you in navigating the on-screen menu, here is a diagram illustrating the menu paths:

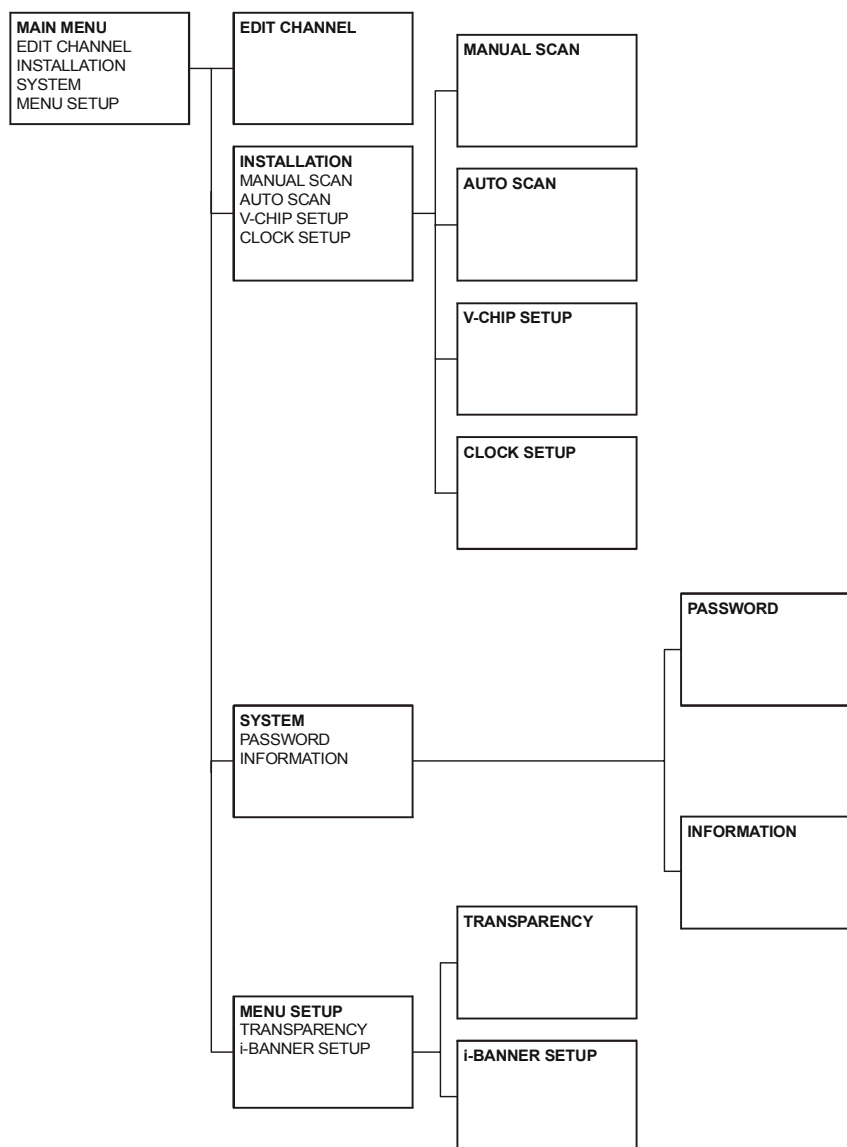

**TROUBLESHOOTING**

Before calling your service provider, review this troubleshooting section. This information will help you quickly solve a problem. If your problem still exists, contact your service provider.

Problem	Possible Solution
The POWER LED on the front panel does not light up	<p>Confirm the power cord is plugged into a functioning power outlet.</p> <p>Press POWER on the front panel to see if the LED lights up.</p> <p>Determine if the HDT101 is in "standby" mode by pressing STANDBY on the remote control.</p>
No picture	<p>Verify that all cables are connected properly (hand-tighten if necessary).</p> <p>If you are watching TV using your VCR, be sure your VCR is on.</p> <p>Verify that the TV is directed to the proper input source.</p>
Poor picture quality	<p>Verify that all cables are connected properly (hand-tighten if necessary).</p> <p>Check the antenna and make sure it is aligned to the correct direction.</p> <p>Check the signal's strength and quality. Press INFO to display the i-Banner and review the color bars at the bottom of the window. If any of the bars are red, adjust your antenna and try again.</p>
No sound	<p>Confirm that your HDT101's and TV's volume settings are properly set and not in "mute" mode.</p> <p>Verify that all cables are connected properly (hand-tighten if necessary).</p> <p>Scan the channel again. Press MENU to display the on-screen menu and select Installation > Manual Scan.</p>

Problem	Possible Solution
After installing the HDT101 and running Auto Scan, not all the available channels have been added	<p>Add the missing channels manually. See “Adding a Channel” in the On-Screen Menu section.</p> <p><i>You may have to reposition your antenna to receive all the local channels, especially if different transmit towers are being used by the networks. For more information, log on to the following web site:</i> http://www.antennaweb.org/</p>
Cannot lock on a signal when manually adding a channel	<p>Verify the channel number is correct.</p> <p>Check the antenna and make sure it is aligned to the correct direction.</p> <p>Check the signal’s strength and quality. Press INFO to display the i-Banner and review the color bars at the bottom of the window. If any of the bars are red, adjust your antenna and try again.</p>
No Closed Captions	Verify that the channel you are watching carries closed captioning.
Cannot receive channels after changing the HDT101’s location	<p>You may have to reposition your antenna. Consult the following web site: http://www.antennaweb.org/</p>
On-Screen Error Messages	
Bad Signal	<p>Verify that the antenna cable is connected properly (hand-tighten if necessary).</p> <p>Check the antenna and make sure it is aligned to the correct direction.</p>
Scrambled Channel	The program you are watching is scrambled by the TV station. The program cannot be decoded by the HDT101.

Visit our website at:
www.motorola.com/broadband/consumers



509927-001
02/04

MGBI